

USER MANUAL MICRO FUTURA

Please follow the below instructions to replace the fiber spool according to the type of launch lead. Make sure to thoroughly follow all the steps to avoid damaging the replacement kit or the launch lead itself.

How to mount the replacement kit on your Micro Futura



Remove the three front screws



Separate the top and bottom lid



Unwind the fiber patch cords




Extract the fiber spool




Insert replacement spool



Make sure that the short patch cord is on the left side and that the rubber cone is properly placed in its housing

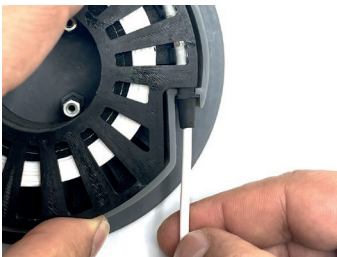

Make sure that the long patch cord is on the right side and properly placed in the housing

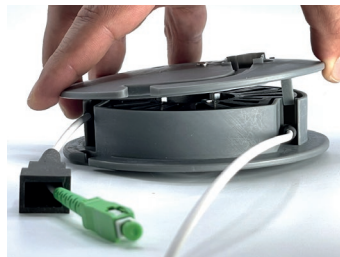

Place the upper lid so that the cog fits in the designated housing



Fasten all three screws



Place the short patch cord in the pre-shaped housing



Coil the long fiber so that the connector can be properly placed in the housing



Place the connector in its housing